

2T Excavator Basic Operations

- Insert key, turn key and hold for 5-10 seconds on first start for the machine to start.
- Pull the handle with the red knob on the left hand side down to engage the controls.
- Left side control operates the lower arm Up / Down / Forward / Back.
- Right side control operates the upper arm Up / Down / Forward / Back.
- Lift buckets via the hand controls
- Right stick to the left buckets curl in and to the right will make the buckets curl out.
- To operate the blade at the front of the machine pull lever on the right hand side with the orange button away from the blade to raise and to lower push towards the blade.
- Left and right levers in the middle of the machine control the left and right track which allow you to turn / drive the excavator.
- Red lever behind the blade lever is the control the revs of the machine.
- Left control stick spins machine, when spinning keep a slow steady speed and have the buckets close to the machine to avoid rolling the excavator.

