

# Common Questions Scissor Lift



When using the controller hold trigger for 3 seconds before moving



Put machine on charge daily to avoid damage to the battery.



Emergency release to bring the scissor down if it gets stuck in the air.

